


3" X 3" POST



SURFACE FASTENERS  
SUPPLIED BY THE  
INSTALLER.

3/8" X 4"  
BOLT ASSY.

BOTTOM BRACKET

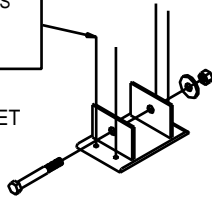


TYPICAL SURFACE-MOUNT ( 3" X 3" POST )  
( USED ON WALL-ATTACHED CANOPIES ONLY )

6" X 4-1/2" POST  
DRAIN HOLE (FIELD CUT)  
& DEFLECTOR PLATE.  
( ON DRAIN POSTS ONLY )

BLOCKOUTS  
(BY OTHERS)

CANOPIE INSTALLER  
TO GROUT COLUMN  
INTO BLOCKOUT.

REBAR

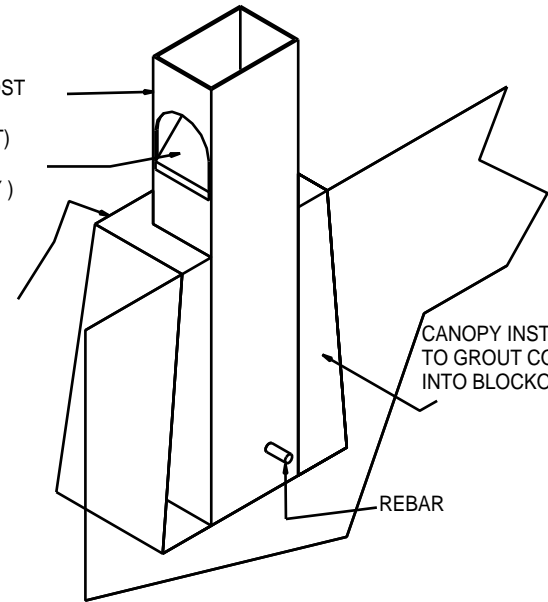

TYPICAL BLOCKOUT  
( 6" X 4-1/2" POST )

4" X 4" POST

DRAIN HOLE (FIELD CUT)  
& DEFLECTOR PLATE.  
( ON DRAIN POSTS ONLY )

BLOCKOUTS  
(BY OTHERS)

CANOPIE INSTALLER  
TO GROUT COLUMN  
INTO BLOCKOUT.

REBAR


TYPICAL BLOCKOUT  
( 4" X 4" POST )

4" X 4" POST

DRAIN HOLE  
(FIELD CUT)  
& DEFLECTOR.  
( ON DRAIN  
POSTS ONLY )

2.5" X 2.5" X .25" ALUM.  
INTERIOR ATTACHMENT ANGLE  
ATTACH THRU POST (3/8" X 1" BOLTS)  
INTO THREADED HOLES IN ANGLE.

ATTACH ANGLE TO  
CONCRETE WITH  
1/2" CONCRETE ANCHOR.

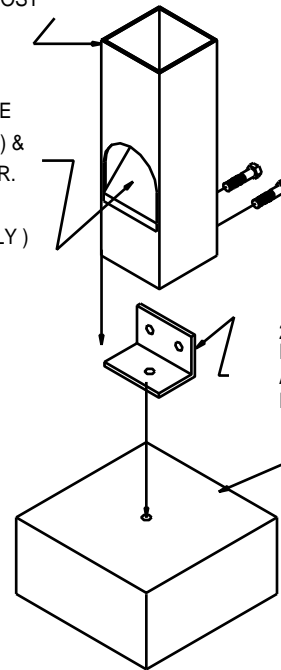

TYPICAL SURFACE-MOUNT  
( USED ON WALL-ATTACHED CANOPIES ONLY )